


Brake Discs with ABS Rings: Sensor Damage



Juratek.com

Issue

When changing brake discs that have an ABS sensor fitted, the disc can at times touch the ABS sensor. If the disc is pushed all the way in, it can bend the sensor and the magnetic sensor ring can become damaged.

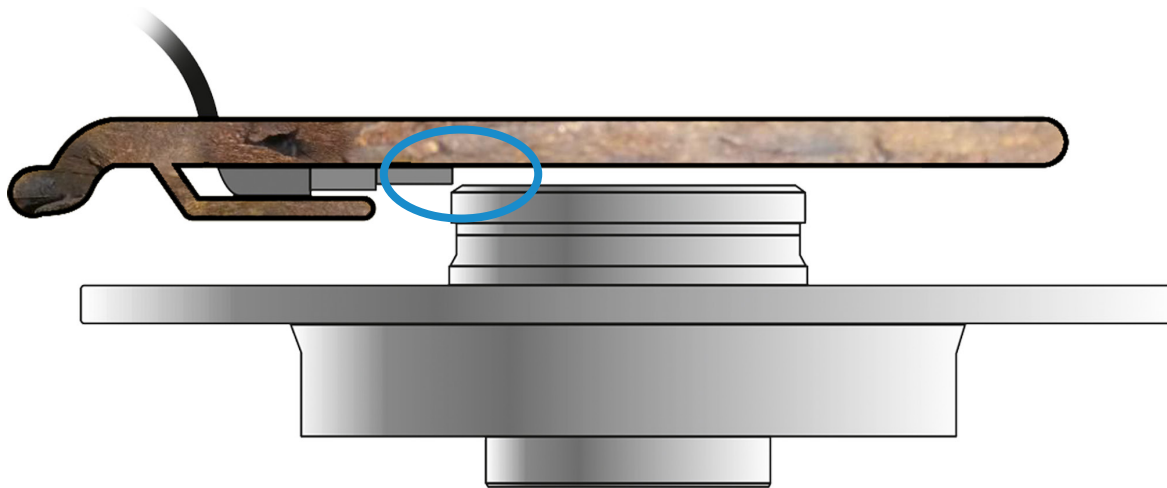

Solution

The ABS sensor is being forced away from its correct position by rust build up behind it on the dust cover plate.

It is advised to remove the sensor and clean away any corrosion. However, if the corrosion is too severe, it may be necessary to fit a new dust cover plate.



BULLETIN #JO19