

Understanding Blacktech Part Numbers

Numbers starting with RML

Without piston - Service air spring assemblies



RML 7924
Diaphragm with top plate and top bump stop



RML 7051
Diaphragm with top plate and bottom plate bump stop



RML 7010 S
Diaphragm without top plate with bottom plate but without bump stop



RML 7010 SP
Diaphragm without top plate with bottom plate bump stop

With piston - Complete air spring assemblies



RML 7051 CI
Diaphragm with top and bottom plate and **METAL** piston - (the number which follows the **C** refers to the top and bottom plate combination. If there is only one combination there will be no number following, if there are several then each will be numbered subsequently.)



RML 7924 CP11
Diaphragm with top and bottom plate and **PLASTIC** piston - (the number which follows the **CP** refers to the top and bottom plate combination. If there is only one combination there will be no number following, if there are several then each will be numbered subsequently.)

Numbers starting with RL



RL 7924
Rubber bellows only (Diaphragm, Rolling Lobe)

Numbers starting with 1C, 2C, 3C



1C 21-170 P02
Single convoluted air spring



2C 18-195 P02
Double convoluted air spring



3C 130-220 P01
Triple convoluted air spring

Numbers starting with 110, 210, 310



110 01 CA
Cabin air spring with shock absorber